

世霖环宇(厦门)进出口有限公司

SL Global(Xiamen)Imp&Exp Co.,Ltd SL Global(Australia) Imp&Exp

自然源木·温情细腻 Natural source wood · Tender and delicate

WOOD GRAIN BRICK

木色·瓷质白坯木纹砖



由于印刷关系,可能与实际的产品颜色有所差异、型号、规格如有所改变将不另行通知, 选购时请以实际样板标注的信息为准!

Asin printing. The colors products may differ slightly with the real ones. So the true products colors shall be followed in application.



自然源木·温情细腻 Natural source wood · Tender and delicate

WOOD GRAIN BRICK 木色·瓷质白坯木纹砖

许多著名的设计其灵感都来源于自然界,尤其在召唤艺术返朴归真、回归自然、寻求野逸质朴之趣的今天 神奇美妙的自然资源更是倍受青睐

沉浸式体验向往的森系生活

SIZE:

200X1000 MM





STYLE.风格

现代轻奢、简约、北欧、工艺风、侘寂风

APPLICABLE SPACE.适用空间

商业空间&浴室、厨房、客厅、卧室、阳台、庭院等

TOUCH.触感 自然舒适面







扫描二维码, 品鉴VR艺术空间





200X1000MM

PAGE.05





STYLE.风格 现代轻奢、简约、北欧、工艺风、侘寂风

APPLICABLE SPACE.适用空间 商业空间&浴室、厨房、客厅、卧室、阳台、庭院等

> TOUCH.触感 自然舒适面









06.PAGE





200X1000MM





STYLE.风格

现代轻奢、简约、北欧、工艺风、侘寂风

APPLICABLE SPACE.适用空间

商业空间&浴室、厨房、客厅、卧室、阳台、庭院等

TOUCH.触感 自然舒适面











PAGE.11





210A83 200X1000MM





STYLE.风格


现代轻奢、简约、北欧、工艺风、侘寂风

APPLICABLE SPACE.适用空间

商业空间&浴室、厨房、客厅、卧室、阳台、庭院等

TOUCH.触感 自然舒适面



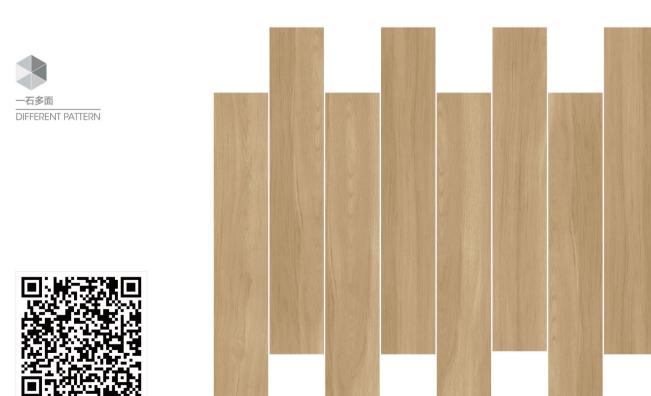

扫描二维码,品鉴VR艺术空间



WOOD

瓷质白坯木纹砖

210A84 200X1000MM

木色







STYLE.风格

现代轻奢、简约、北欧、工艺风、侘寂风

APPLICABLE SPACE.适用空间


商业空间&浴室、厨房、客厅、卧室、阳台、庭院等

TOUCH.触感 自然舒适面







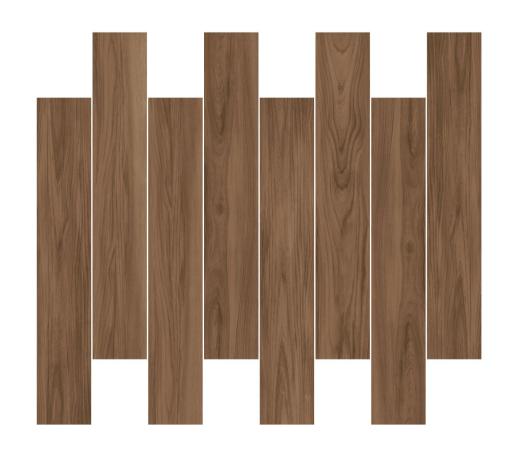





200X1000MM





STYLE.风格


现代轻奢、简约、北欧、工艺风、侘寂风

APPLICABLE SPACE.适用空间

商业空间&浴室、厨房、客厅、卧室、阳台、庭院等

TOUCH.触感 自然舒适面



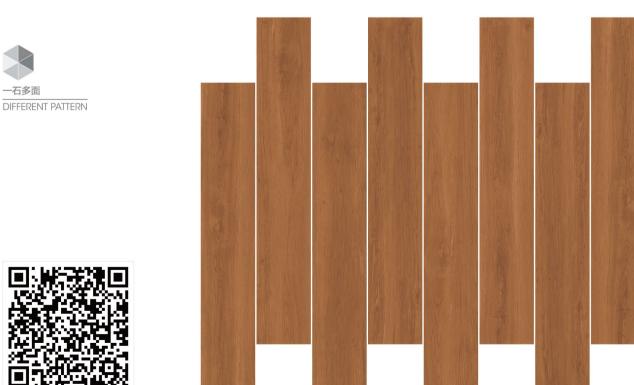



扫描二维码, 品鉴VR艺术空间



200X1000MM








STYLE.风格

现代轻奢、简约、北欧、工艺风、侘寂风

APPLICABLE SPACE.适用空间 商业空间&浴室、厨房、客厅、卧室、阳台、庭院等

> TOUCH.触感 自然舒适面



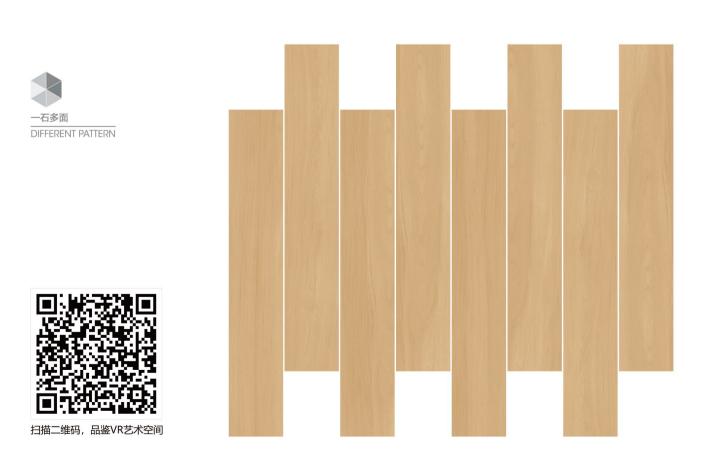









STYLE.风格

现代轻奢、简约、北欧、工艺风、侘寂风


APPLICABLE SPACE.适用空间

商业空间&浴室、厨房、客厅、卧室、阳台、庭院等

TOUCH.触感 自然舒适面





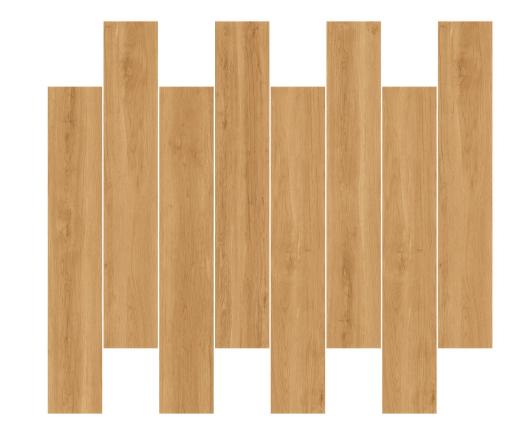



扫描二维码,品鉴VR艺术空间



210A88 200X1000MM







STYLE.风格

现代轻奢、简约、北欧、工艺风、侘寂风

APPLICABLE SPACE.适用空间

商业空间&浴室、厨房、客厅、卧室、阳台、庭院等

TOUCH.触感 自然舒适面















210A89 200X1000MM


瓷质白坯木纹砖

木色· 瓷质白坯木纹砖



- 1、确定方案:常用木纹砖的铺贴方式,除了与传统的陶瓷墙地砖一样的井子形中规中矩,横平竖直的铺贴方法外,木纹砖还有人字形、工字形、斜形菱线等铺贴方法。铺贴方式可谓是多种多样,各有千秋,所以一定要与设计师一起先确定方案。
- 2、找平:所谓找平,即时在铺木纹砖前,应对铺贴的建筑物地面或墙面表面进行处理。如地面、内墙、外墙等。消除表面的附着物,用半湿水泥沙湿合铺平。
- 3、弹线:弹线即是指用一段长的细线,涂上白灰货墨汁,确定砖的中轴线,然后按线铺贴。
- 4、选砖:要看计划铺的砖的品种,挑选出来分门别类放好。比如说铺地木纹砖、上墙的木纹砖、地脚线的木纹砖等要区分开来,以免铺起来弄混了。
- 5、浸砖:木纹砖与抛光砖、仿古砖一样要浸泡水,要用自来水或清水,不能用浑水或脏水,更不能用油污水;浸泡时间不需太长时间,也就是说,泡湿即可。(瓷片则一定要泡透才能铺贴)
- 6、混浆:水泥沙应以1:2的比例混合,应采用标号低于200的水泥,标号太高的水泥会对木纹砖形成内应拉力,严重的会拉裂木纹砖。
- 7、涂浆:取出浸泡好的木纹砖,擦干木纹砖的水渍,将水泥浆均匀涂抹在木纹砖背面,砂浆厚度在2-3厘米,随即将木纹砖往地面水泥沙面上铺,用木锤轻轻敲击木纹砖砖面,直至铺平平整、对线整齐为止。
- 8、 铺贴: 铺贴要注意木纹砖纹理顺序,注意看木纹砖砖底标示箭头等,木锤敲打避免空敲,力量要均衡,用力避免过大或过小。 最好应用铺砖用的塑料十字架,这 样可以更好给木纹砖定位。木锤敲打木纹砖缝反溢的水泥浆用海绵或抹布抹平即可。高档的木纹砖一般缝隙小于1毫米,不需专门填缝。
- 9、修整:木纹砖铺好,水泥还未完全干透,即可用肉眼观察或用水平尺测量,按照标准对木纹砖进行修整。检查砖铺贴的平整度,砖缝直线度等。发现问题,马上修整,严重的撬开木纹砖重新铺贴。
- 10、填缝: 如要填缝则待水泥干了后用铁钩勾缝, 再配以搭配颜色的填缝剂填缝。
- 1. Determine the scheme: The common paving method of wood–grain bricks is not only the well–shaped and regular, horizontal and vertical paving method like the traditional ceramic wall and floor tiles, but also the herringbone, l–shaped, oblique diamond line and other paving methods. It may be said that the way of paving is a variety of, each has its own merits, so we must decide the plan together with the designer.
- 2, leveling: the so-called leveling, immediately before the paving of wood brick, should be pasted on the building floor or wall surface treatment. Such as ground, interior walls, exterior walls, etc. Remove surface attachments and flatten with semi-wet water and sediment.
- 3, elastic line: elastic line refers to a long fine line, coated with white ink, determine the central axis of the brick, and then paste according to the line.
- 4, choose brick: want to see the variety of the brick that the plan spreads, choose to come out classify put well. For instance the wood grain brick of the wood grain brick that spreads ground brick, wall, floor line should differentiate, lest spread rise mix.
- 5, dip brick: wood grain brick and polished brick, antique brick to soak water, to use tap water or clean water, can not use muddy water or dirty water, but also can not use oil sewage; Soaking time does not need to be too long, that is to say, soaking wet. (The tiles must be soaked through before being laid)
- 6. Slurry mixing: water and sediment should be mixed in a ratio of 1:2. Cement with a label of less than 200 should be used.
- 7. Grouting: take out the soaked wood bricks, wipe off the water stains of the wood bricks, evenly apply the cement slurry on the back of the wood bricks, with the mortar thickness of 2–3 cm, then spread the wood bricks to the water and sand surface of the ground, and gently knock the wood hammer on the wood brick surface until it is smooth and neat.
- 8. Paving: Pay attention to the texture sequence of wood grain bricks and the mark of arrow on the bottom of wood grain bricks. Avoid empty knocking with wood hammer, balance the force and avoid too much or too little force. It's best to use a plastic cross for bricklaying, which will better position the wood–grain bricks. A wooden hammer strikes the backflow of cement slurry between wood grain brick joints and flatters it with a sponge or rag. General gap of high–grade wood grain brick is less than 1 millimeter, do not need special fill seam.
- 9. Finishing: When the wood grain bricks are laid and the cement is not completely dry, the wood grain bricks can be dressed according to the standard by visual observation or horizontal measurement. Check the flatness of tile placement, straightness of tile joints, etc. Find the problem, immediately repair, seriously pry open the wood–grain brick and re–lay paste.
- 10. Seam filling: If you want to fill the seam, use iron hook to mark the seam after the cement dries, and then match the color of the seam filling agent.

常见铺贴样式 I COMMON SPREAD PATTERN

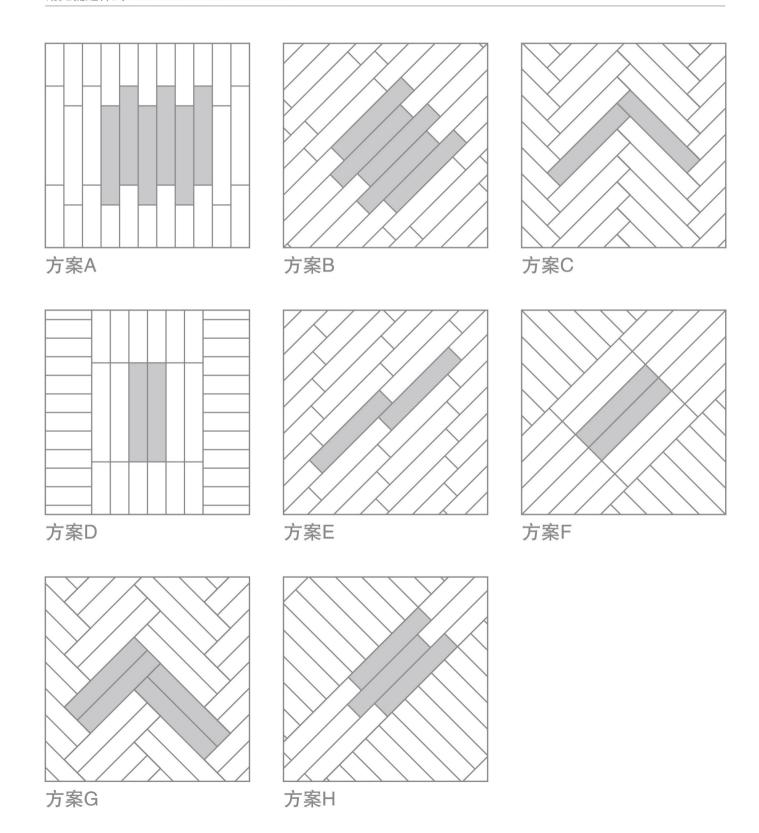



世霖环宇(厦门)进出口有限公司 SL Global(Xiamen)Imp&Exp Co.,Ltd SL Global(Australia) Imp&Exp